

# **STRAIGHTLINE**

## **PERFORMANCE**

### **Installation instructions for Straightline Performance Quick Adjust Clickers.**

1. Dissassemble the TRA primary clutch.
2. Unbolt the ramps and remove the stock TRA clicker.
3. Install the new Quick Adjust Clicker as shown below.



When the new pin is installed the threads should protrude through the lock nut least 1/16 of an inch out.

# **STRAIGHTLINE**

## **PERFORMANCE**

### **Installation instructions for Straightline Performance Quick Adjust Clickers.**

1. Disassemble the TRA primary clutch.
2. Unbolt the ramps and remove the stock TRA clicker.
3. Install the new Quick Adjust Clicker as shown below.



When the new pin is installed the threads should protrude through the lock nut least 1/16 of an inch out.

# **STRAIGHTLINE**

## **PERFORMANCE**

### **Installation instructions for Straightline Performance Quick Adjust Clickers.**

1. Dissassemble the TRA primary clutch.
2. Unbolt the ramps and remove the stock TRA clicker.
3. Install the new Quick Adjust Clicker as shown below.



When the new pin is installed the threads should protrude through the lock nut least 1/16 of an inch out.