



STRAIGHTLINE **PERFORMANCE**

Skidoo 600 EFI Instructions and BOM (134-192) **Peak RPM Target 7500-7600 RPM**

1. Remove the hood, and first remove the 4 screws that hold the hood onto chassis.
 - a. Remove the side mounted screw and the upper mounts show on the left picture, previous page. There will be one on each side.
 - b. Next remove the 2 screws that are under the storage compartment, previous page right picture.
 - c. Un Screw the air box from the hood assembly as shown above.
 - d. Lastly, unplug the head lights, MAP sensor, and gauge cluster. Then remove hood.
 - e. Remove all the springs as seen on the next page
 - f. Remove the lower grommet and install into new pipe, this will require some lube to install.
 - g. Remove the tail grommet and install onto new Straightline pipe. Re-install pipe and complete hood assembly.

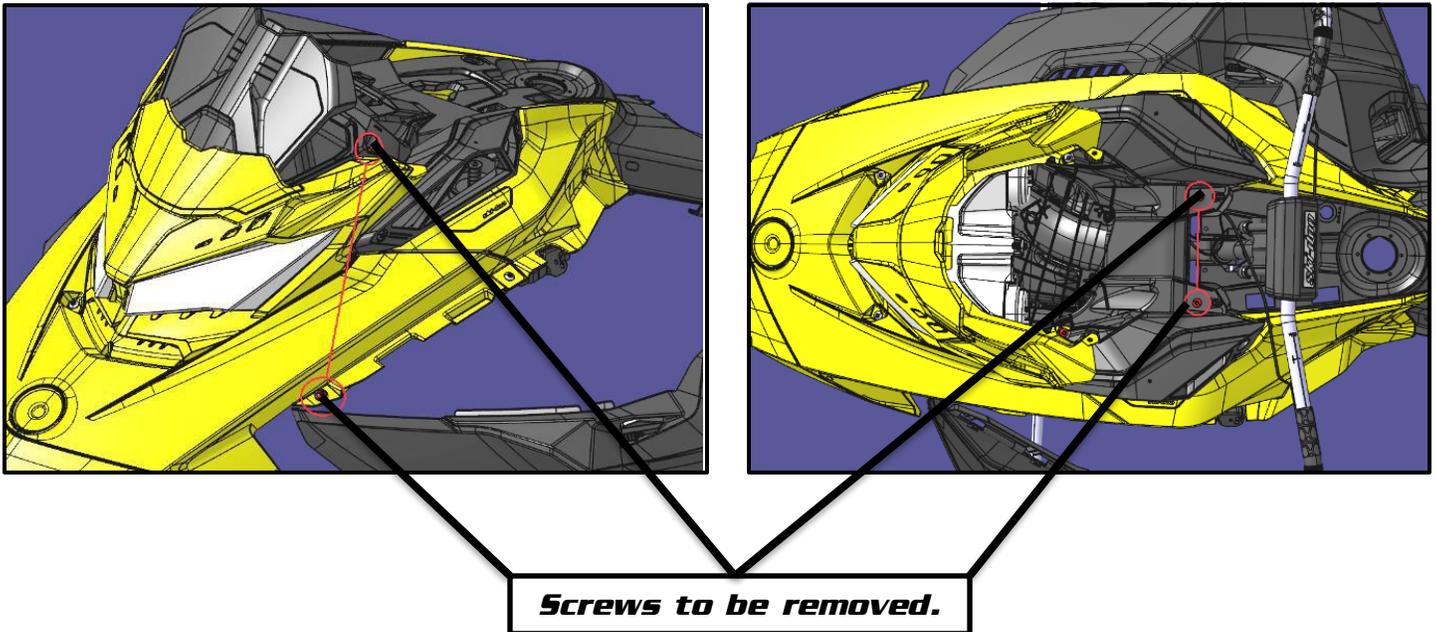

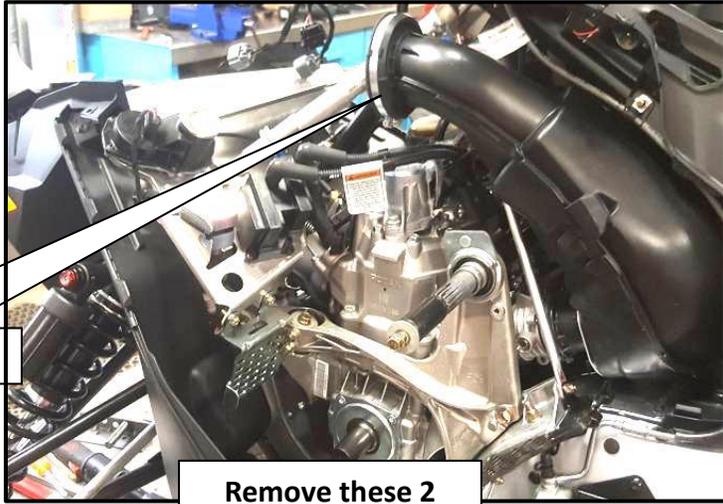

Air box clamp to Unscrew

Remove these 2
springs



Remove the 3 head
pipe springs

Remove stock
grommet under





Install stock grommet
into new Straightline

BOM:

Quantity	Part #	Descriptions	In Box
1	134-192	Skidoo 600 EFI PIPE	
1		Sticker	

Checked and Packaged By

Technical questions please email tech@straightlineperformance.com