



Straightline Ski-Doo 850 G4 Series Skid Plate 183-232 (Instructions and BOM)

Skid Plate instructions




P1	Skid plate		Qty 1
P2	3/4" Bolt		Qty 2
P3	5/8" Bolt		Qty 4
P4	Nylock Nut		Qty 6
P5	Washers		Qty 2

1. Elevate or flip machine on its side, then hold skid plate up for reference



2. Drill front two dimples on stock nose cone

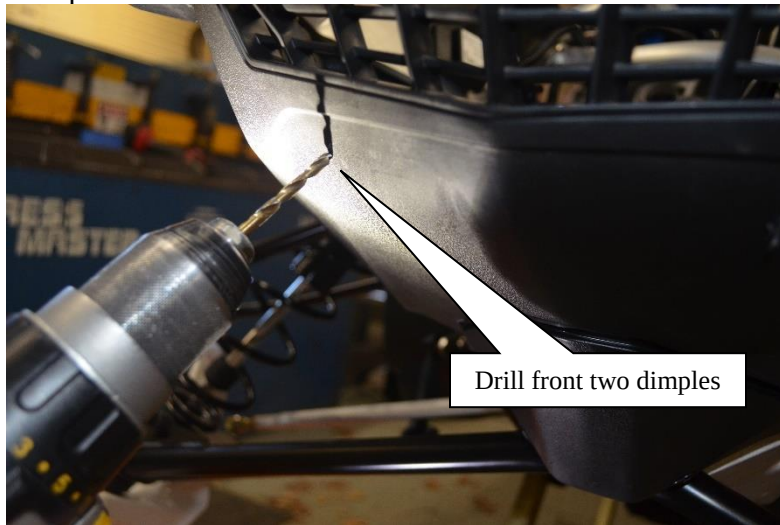

3. Mount skid plate with front two bolts (**short**) using supplied washers on the backside and tighten.



4. Using skid plate as a template push it flush with the chassis mark and drill bottom holes. Use long bolts and tighten sucking the skidplate around weld.



5. Using skid plate as a template drill final two holes. Then install and tighten bolts sucking skid plate up around the nose cone



BOM Circle One: 183-232 183-232 White 183-232 Yellow 183-232 Red 183-232 Orange
 183-232 Blue 183-232 Green 182-232 Raw

QTY	Item #	Description	In box
1	183-232	Skid Plate	
1	100200-11203	Skid Plate Hardware Kit	
1		Straightline Sticker	

Checked and Packaged By

Technical questions please email tech@straightlineperformance.com
 Facebook @ straightlineperformanceinc
 Youtube @ straightlineperfinc
 Twitter @ straightlineperf