


STRAIGHTLINE **PERFORMANCE**

Ski-doo 900 – Silicone Intake Tube Kit Installation Instructions 193-109

1. Remove hood per manufactures service manual instructions.

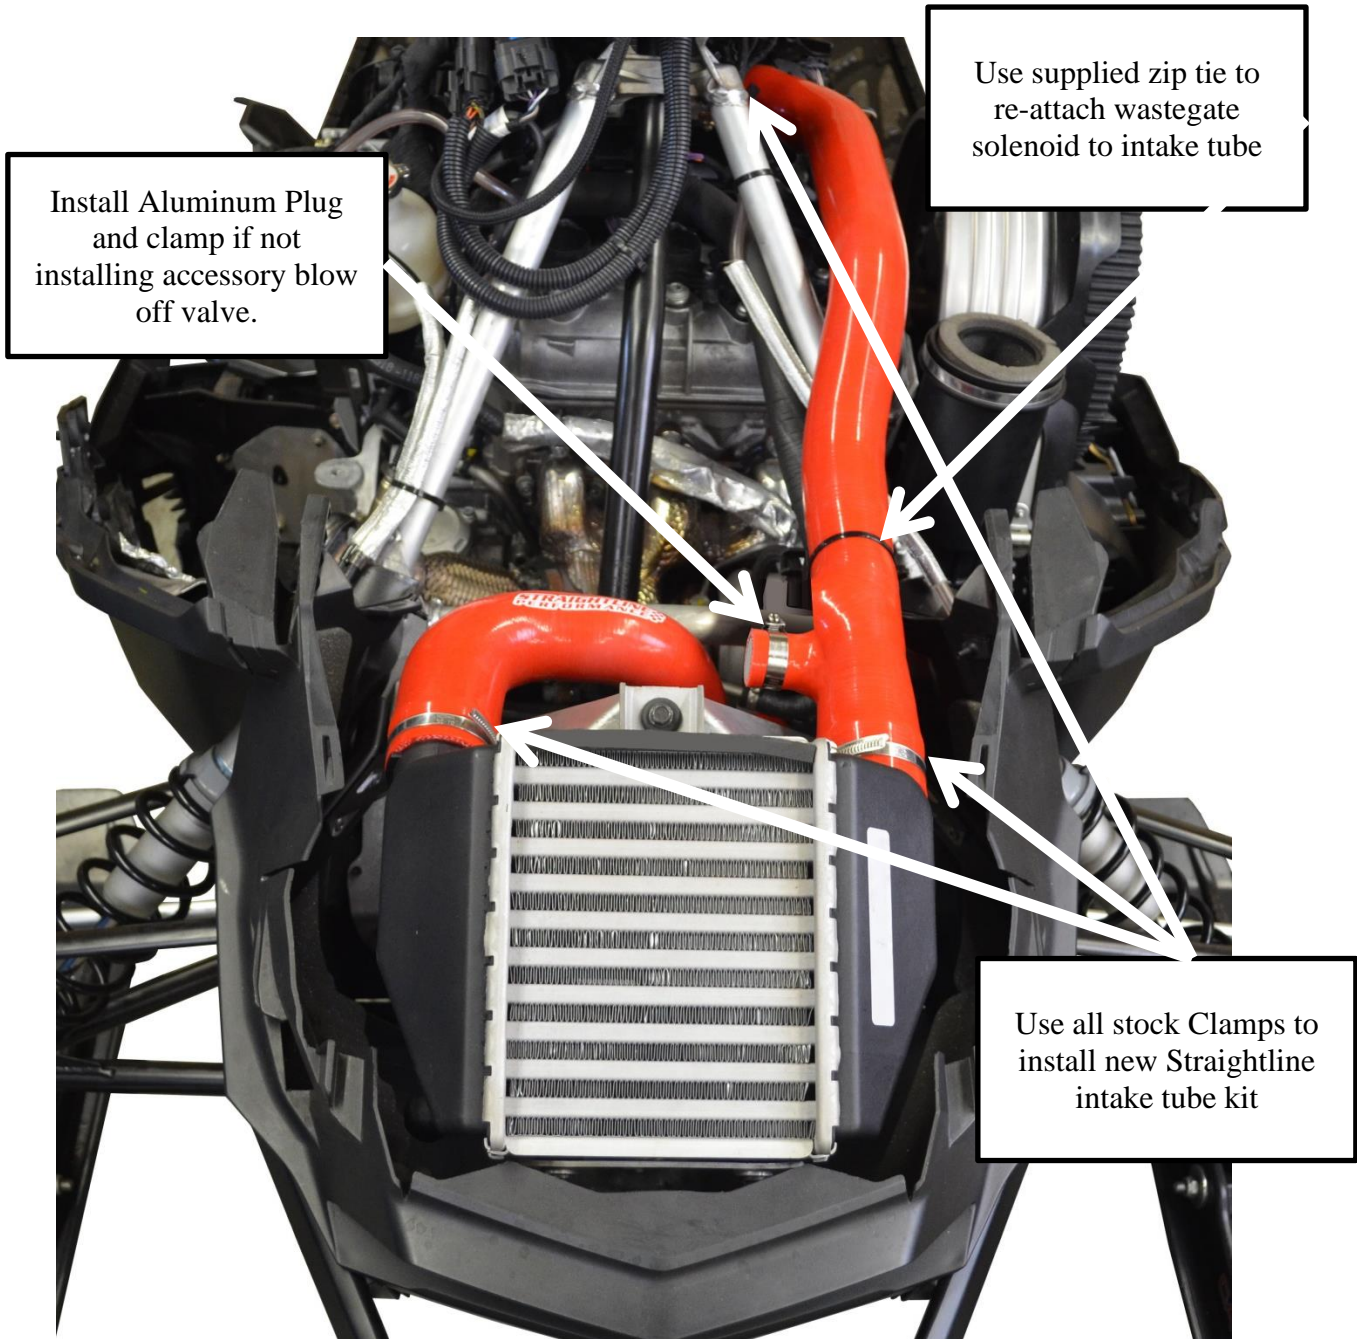

- Jetting Requirements- No Jetting Required
- Clutching Requirements-No Clutching Required
- Facebook @ straightlineperformanceinc1 - Youtube @ straightlineperfinc - Twitter @ straightlineperf
 Technical Question Please Email Tech@straightlineperformance.com

: Bill of Materials (BOM)

Qty	Part Number	Description	In Box
1	IT-193-109-Press1	Silicon Hose with Hole (Long)	
1	IT-193-109-Press2	Silicon Hose (short)	
1	IT-193-109-Spacer	1" Aluminum Spacer	
1	63130	14.5 Black Cable Tie	
1	2138Clamp	21-38MM Clamp	
1		Instructions	

Checked By:	