

# **STRAIGHTLINE** **PERFORMANCE**


## **Ski-doo 900 – Blow-off Valve Kit Installation Instructions 193-110**

1. Remove hood per manufactures service manual instructions.
2. If silicone tube kit has been previously installed, **remove the aluminum plug on the side of the air box charge tube before installing the blow-off valve**

Install blow-off valve  
with the outlet facing  
down and secure with  
clamp




Drill a 5/32 hole in the top of the air box in front of the map sensor and install nipple as pictured

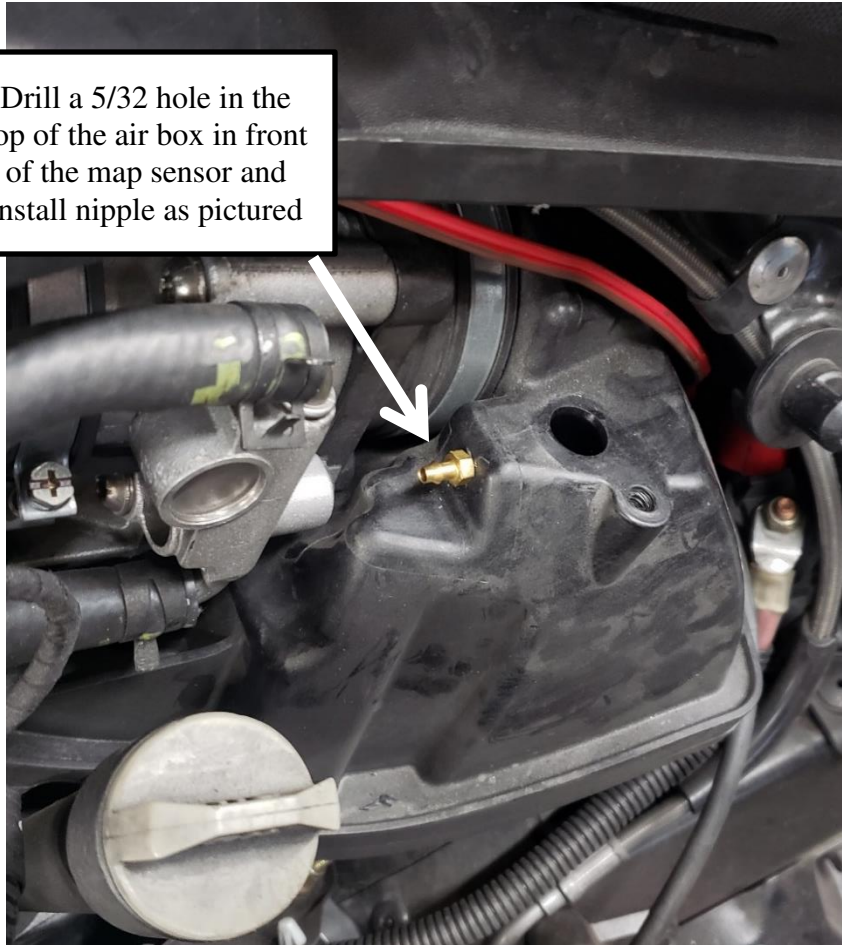

Route hose along harness and frame tube and fasten with the large cable ties as pictured





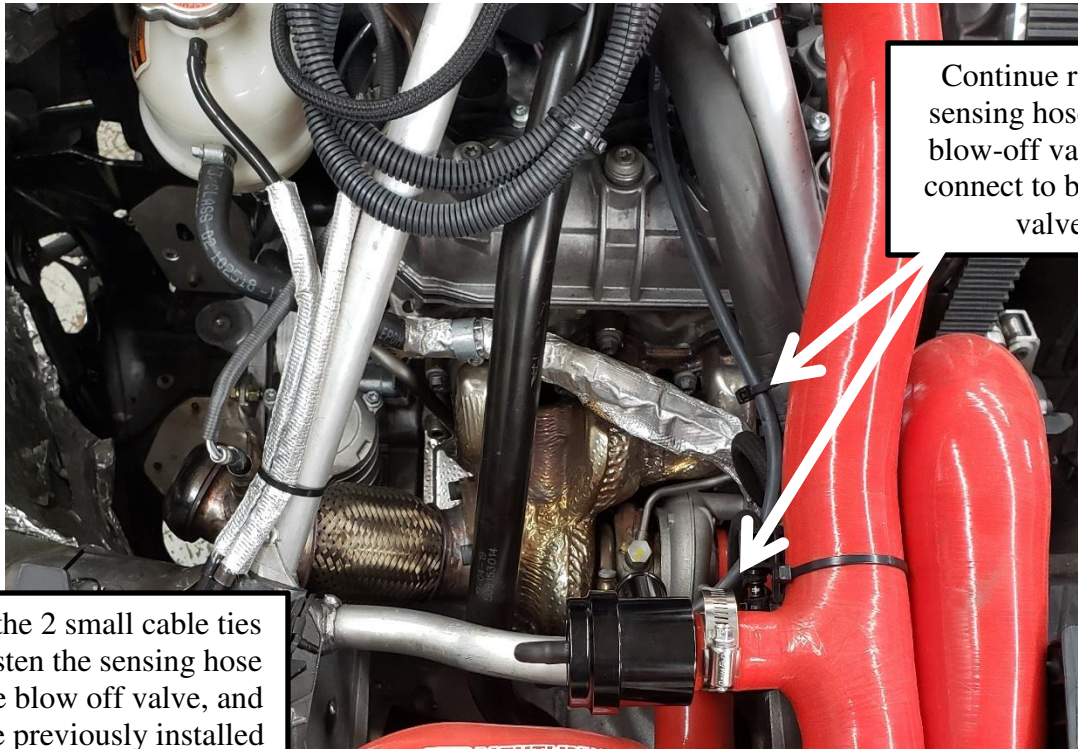

Continue routing sensing hose to the blow-off valve and connect to blow-off valve

Use the 2 small cable ties to fasten the sensing hose to the blow off valve, and to the previously installed nipple in the air box

- Jetting Requirements- No Jetting Required
  - Clutching Requirements-No Clutching Required
  - Facebook @ straightlineperformanceinc1 - Youtube @ straightlineperfinc - Twitter @ straightlineperf
- Technical Question Please Email [Tech@straightlineperformance.com](mailto:Tech@straightlineperformance.com)

: Bill of Materials (BOM)

| Qty | Part Number     | Description             | In Box |
|-----|-----------------|-------------------------|--------|
| 1   | BOV-007-BK      | Blow-off valve          |        |
| 33" | IT-227-100-Hose | air box to sensing hose |        |
| 1   | NP-121          | Nipple-air box          |        |
| 4   | 63130           | 14.5" black cable tie   |        |
| 2   | NP-211          | Small cable tie         |        |
| 1   |                 | Instructions            |        |

|             |  |
|-------------|--|
| Checked By: |  |
|             |  |