





STRAIGHTLINE PERFORMANCE

Straightline Polaris MATRYX Bottom wing 182-120


Use Instructions for Sport Series bumper



P1	Bottom wing		Qty 1
P2	1" Bolt		Qty 2
P3	Nylock Nut		Qty 4
P4	1 1/4" Bolt		Qty 2

POIARIS MATRYX BOTTOM WING

1. **Lower Wing Installation:** Install the lower wing (P10). Slide it up from the bottom and install onto the two front holes on P1. You will fasten the bottom wing using picture below for assembly. The areas that have three plates will require the longer (P4) bolts.

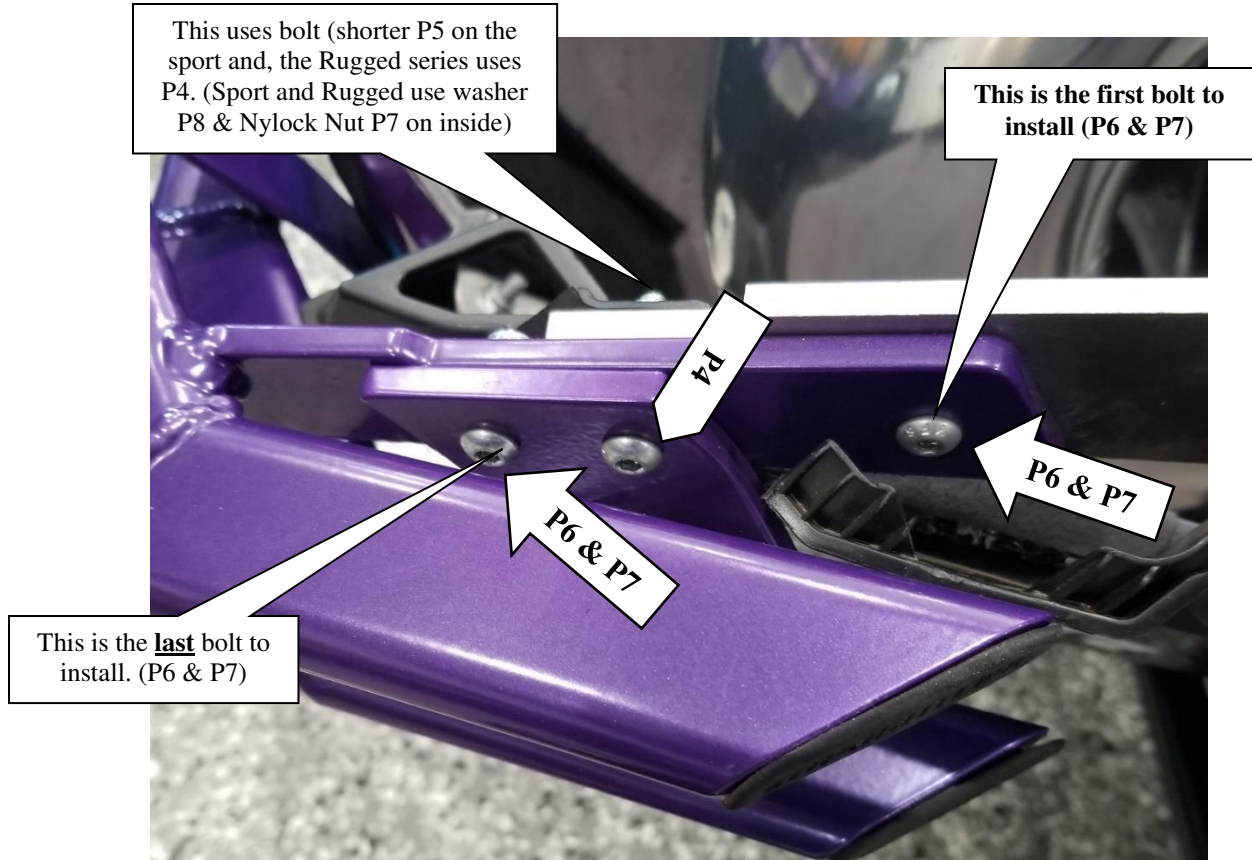

Quantity	Item #	Descriptions	In Box
1	182-120	Complete Lower Wing Assembly	
1	10200-11355	Lower Wing Hardware Kit	
1		Straightline Sticker	

Checked and Packaged By

Technical questions please email tech@straightlineperformance.com

Facebook @ straightlineperformanceinc

Youtube @ straightlineperfinc

Twitter @ straightlineperf